

#### **Potentiometer for Actuator**

Specification and Installation Instructions

#### **Models**


FD5-T: Feedback potentiometer for L, T and R actuators.



# **Technical Specification**

| Description                   |   | FD5-T  |
|-------------------------------|---|--|
| Actuator Compatibility        |   | Neptronic L, T and R series actuators                      |
| Power Supply                  |   | 10 VDC maximum   |
| Electrical Connection         |   | Cable 39.5" (1m), 3 x 18AWG, FT1 with ½" conduit connector |
| Resistance                    |   | 5 k? (Tol. +/- 30%)  |
| Purpose and Action of Control |   | Type 1 operating control                                   |
| Construction of Control       |   | Independently mounted, accessory                           |
| Polution Degree               |   | 2  |
| Impulse Voltage               |   | 800V   |
| Dimensions                    | A = 3.3" or 3.5" (86mm or 89mm)<br>B = 5.3" (135mm)<br>C = 10.7" (272mm)<br>D = 4.3" (110mm)<br>E = 9.2" (234mm)<br>F = N/A |  |

## **Wiring Diagram**

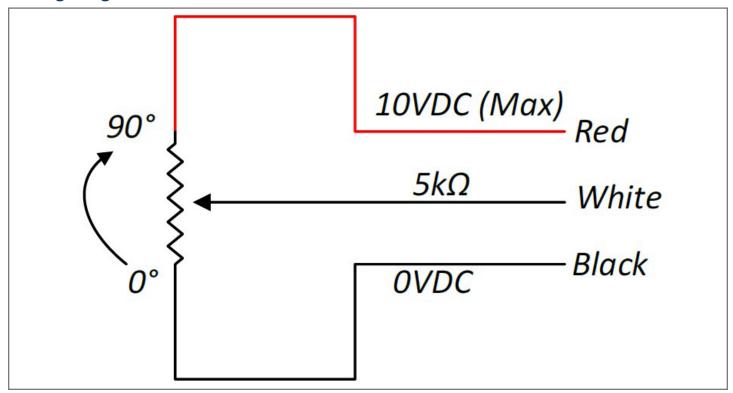




## **Potentiometer for Actuator**

Specification and Installation Instructions

### **Mounting Instruction**

1. Screw the actuator onto the bracket using the two nuts and washers (supplied).

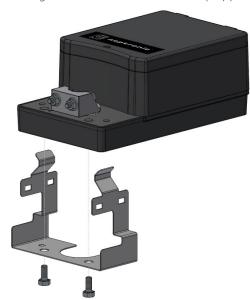

2. Ensure that the FD5 adaptor is aligned with the adaptor from the actuator. Align the FD5 with the bracket and press it until it clips in place. Ensure that all 4 protrusions are properly clipped in place.

