

## **Potentiometer for Actuator**

Specification and Installation Instructions

# **Description**


**FD5-B:** Feedback potentiometer for C, D, B and S actuators. **FD5-T:** Feedback potentiometer for L, T and R actuators.



# **Technical Specifications**

Description		FD5-B	FD5-T
Actuator Compatibility		Neptronic C, D, B and S series actuators	Neptronic L, T and R series actuators
Power Supply		10 VDC maximum	
Resistance		5 kΩ (Tol. +/- 30%)	
Purpose and Action of Control		Type 1 operating control	
Construction of Control		Independently mounted, accessory	
Pollution Degree		2	
Impulse Voltage		800V	
Dimensions with  A = 3.0" B = 4.5" C = 8.0" D = 3.2" E = 6.5" F = 3.6"	76 mm   114 mm   203 mm   81 mm   165 mm   91 mm	C	C
A = 3.7" B = 5.3" C = 10.7" D = 3.6 or 3.8" E = 9.1"	94 mm   135 mm   272 mm   91 mm or 97 mm   231 mm	BFE	B

# Wiring

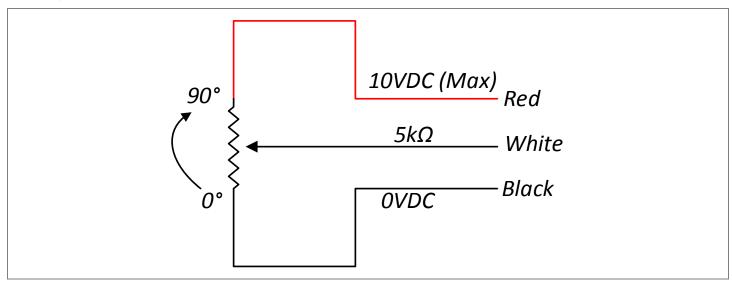

FD5-220216 Page | 1




## **Potentiometer for Actuator**

Specification and Installation Instructions


# **Mounting Instructions**

1. For FD5-B: Screw the actuator onto the bracket using the two nuts (supplied).

For FD5-T: Slide the bracket onto the actuator and secure it by inserting the two bolts from the bottom into the threaded holes of the actuator (supplied).

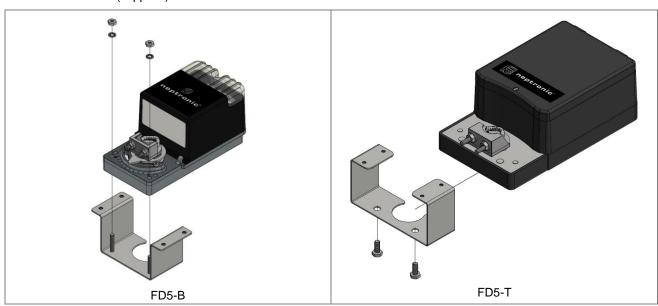

2. Secure the potentiometer onto the bracket by using the four screws (supplied). Ensure that the actuator adaptor is properly aligned with the potentiometer adaptor.

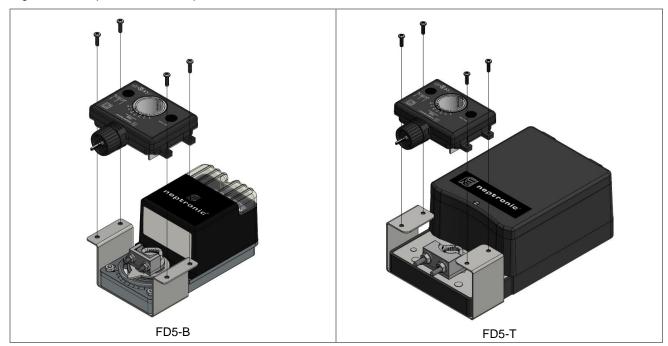



Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult **www.neptronic.com**.

www.neptronic.com Page | 2